

# Speedflow Accessories

## Unvented Water Heater

5, 10 and 15 litre

Depending on the details of the Speedflow installation additional accessories may be needed to comply with the Water Regulations.

See diagrams on the opposite page.

### SF3 Kit

Expansion vessel and check valve  
2 litre expansion vessel set at 3.5 bar.  
Buy SF6 kit instead of SF3 for fast install.



### SF4 Kit

Expansion vessel, check valve  
and pressure reducing valve.  
Buy SF7 kit instead of SF4 for fast install.



### SF5 Kit

Pressure reducing valve set at 3 bar



### Fast Install Inlet Group

New inlet group to connect expansion vessel and pressure relief valve, incorporating check valve and service valve, to ensure installation is correct every time. Allows for easier quicker installation, saves valuable time and service valve facilitates easy maintenance.



### SF6 Kit

Expansion vessel and fast install inlet  
group incorporating check valve

### SF7 Kit

Expansion vessel, pressure reducing valve  
and fast install inlet group incorporating  
check valve

### SF8 Kit


Fast install inlet group incorporating check valve

\*All SF kit components WRAS approved

Accessory	Height (mm)	Width (mm)	Depth (mm)	Weight (kg)
Expansion vessel	225	120	120	1.0
Check valve	65	25	25	0.1
Pressure reducing valve	73	64	46	0.3
Inlet group	52	120	44	0.3


### Diagram A

Pressure below 4.2 bar and hot water expansion can be accommodated in the pipework

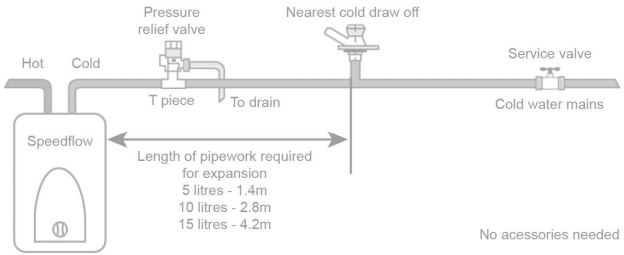

### Diagram B


Pressure above 4.2 bar and hot water expansion can be accommodated in the pipework

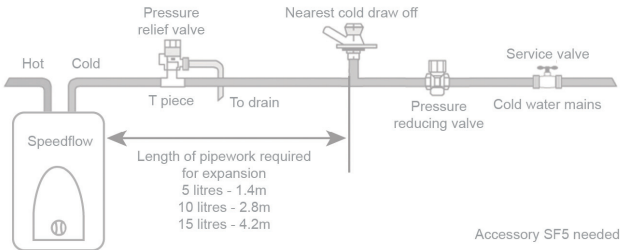

p. 47

### Diagram C

Pressure below 4.2 bar and hot water expansion cannot be accommodated in the pipework (cold water draw off nearby)

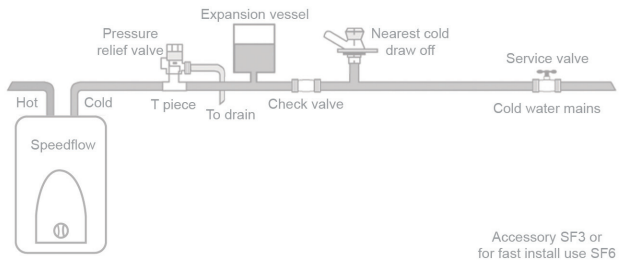

### Diagram D

Pressure above 4.2 bar and hot water expansion cannot be accommodated in the pipework (cold water draw off nearby)

